

**TASTY**<sup>®</sup>

**1 PINT MINI ICE CREAM MAKER  
QUICK START GUIDE**

# Tasty 1 PINT MINI ICE CREAM MAKER

## QUICK START GUIDE

**Note:** This ice cream maker produces single-serve portions of ice cream approximately 2 cups.



SCAN  
FOR TASTY  
RECIPES!



**1. Freeze Bowl:** Put bowl in the freezer for at least **24 hours**. If you still hear liquid moving in the bowl when moved, that means the freezer bowl needs more time in the freezer.



**2. Prepare ice cream mixture:** Select desired recipe and follow recipe instructions. Put prepared mixture in refrigerator and **chill the mixture overnight** for optimum results.



- 3. Assemble unit:** Disconnect it from the power source, insert the motor into the lid until it clicks, then insert the dasher into the motor, twist the assembled motor, lid, and dasher onto the freezer bowl counterclockwise to secure it.



- 4. Add ingredients:** Pour chilled mixture into the bowl via the ingredient chute, leaving 1½ inches from the top. **Avoid overfilling mixture.**



- 5. Power on:** Plug in the power cord and switch the unit ON. (Avoid contact with moving parts.)



- 6. Churn:** Let the mixture churn for 15-30 minutes until desired consistency. Some recipes may require less time, please monitor the ice cream maker for best results.



**7. Add-ins:** You can add in your favorite ingredients such as chocolate pieces, nuts or candy etc. through the chute as the mixture starts to freeze.



**8. It's done:** Once ice cream has reached desired consistency, turn off the power and unplug the power cord. Detach the electric motor, lid, and dasher assembly by turning it clockwise. Remove the dasher and use a spatula to scrape off excess ice cream.



**9. Enjoy:** Transfer the ice cream to a freezer-safe container for storage for 2-4 hours for firmer ice cream. Or enjoy soft serve ice cream directly from the freezer bowl!

**Please read all use, care and safety instructions in the included User Guide before use.**

**TASTY®**

**1 PINT  
ICE CREAM  
MAKER**

---

**USER GUIDE**

TY11695, 120V ~ 60Hz 15W

**Thank you for purchasing the Tasty® 1 Pint Ice Cream Maker.**

READ ALL INSTRUCTIONS BEFORE USE.

For your safety and enjoyment of the product, please read all instructions in the user guide before use.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instructions before use.**
2. Never leave the appliance unattended while in use.
3. **DO NOT TOUCH** the cold surfaces. Use handles or knobs.
4. This appliance is not a toy.
5. To protect against fire, electric shock, and injury to persons, do not place or immerse cord, plug, or appliance in or near water or other liquids.
6. Do not use the appliance near water or other liquids, with wet hands, or while standing on a wet surface.
7. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
8. Avoid contact with moving parts. Do not attempt to defeat any safety interlock mechanisms.
9. Unplug from outlet when not in use and before cleaning, moving, or storage. Allow appliance to cool completely before putting on or taking off parts, moving, cleaning, or storing the appliance.
10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, is dropped, or has been damaged in any manner. Contact Epoca International customer service for examination, repair, or adjustment.
11. The use of accessory attachments not recommended by Epoca International may cause fire, electric shock, or injuries to persons.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. Do not place on or near any heat source, such as radiators, heat registers, stovetops, a hot gas or electric burner, in a heated oven, or other products that produce heat. Keep away from fire or other flammable substances.
15. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
16. To safely disconnect power at any time, turn any control to "OFF," then remove the plug from the wall outlet.
17. **WARNING!** To reduce the risk of fire or electrical shock, repair should be done only by authorized personnel. The appliance has no user serviceable parts.
18. Do not operate the appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire,

especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

19. Never operate the unit dry. Always have ice cream mixture inside of the container while plugged in.
20. Do not use hot oil or liquids in the freezer bowl. Always chill mixture before churning.
21. Do not put hands or any foreign objects into this appliance while it is plugged in and operating.
22. Avoid contact with moving parts. Keep hands, hair and clothing, as well as spatulas and other utensils, away during operation to reduce the risk of injury and/or damage to the appliance.
23. Keep hands and utensils out of freezer bowl while in use to reduce the risk of injury to persons or to the appliance itself. **DO NOT USE SHARP OBJECTS OR UTENSILS INSIDE THE FREEZER BOWL!** Sharp objects will scratch and damage the inside of the freezer bowl. A rubber spatula or wooden spoon may be used when the appliance is in the OFF position.
24. Do not use the freezer bowl on flames, hot plates or stoves. Do not expose to heat source. Do not wash in dishwasher; doing so may cause risk of fire, electric shock or injury.
25. Epoca International shall not accept liability for damages caused by improper use of the appliance.
26. Improper use of the appliance can result in property damage or personal injury.

27. Do not use appliance for other than its intended use. It is made for household use only.

# HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

## **POLARIZED PLUG**


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## **CORD INSTRUCTIONS**

- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extended cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.



## PARTS & FEATURES

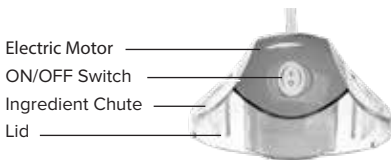

## BEFORE USE

Remove all packaging materials and any stickers on the ice cream maker, except for the rating label that must remain on the unit.

Inspect the ice cream maker for any visible damage or missing parts. Prior to the first use or after extended storage, clean and dry the appliance, per the instructions in the "Cleaning and Maintenance Instructions."

## ASSEMBLY

1. Make sure the unit is disconnected from the power source, and then insert the electric motor into the lid. The unit will audibly click into place when it is securely attached.
2. Insert the dasher into the slot located on the underside of the electric motor.
3. Position the electric motor, lid, and dasher assembly on top of the freezer bowl, and twist it counterclockwise to secure it in place.
4. The ice cream maker is now ready to use with the ON/OFF switch.

## OPERATING INSTRUCTIONS

1. Place the freezer bowl in freezer for at least 24 hours before using your ice cream maker.  
NOTE: To determine if the freezer bowl is ready to use or not, simply shake the bowl after freezing. If you still hear liquid moving, that means the freezer bowl needs more time in the freezer.
2. Select your preferred recipe and follow the instructions to prepare the ice cream or yogurt mixture. Then store it in the refrigerator until you are ready to use.
3. Position the ice cream maker on a clean, stable surface near an electrical outlet.
4. Remove the freezer bowl from freezer, then place the electric motor, lid, and dasher assembly on top of the freezer bowl, and twist it counterclockwise to secure it in place.
5. Take the ice cream or sorbet mixture from the refrigerator. Use the ingredient chute to pour the mixture into the freezer bowl. When pouring, make sure to leave at least 1.5 inches of space from the top, as the mixture will expand during freezing.
6. Plug the power cord into a standard electrical outlet. Then press the ON/OFF switch into the ON position ("I").
7. Let the mixture churn until it reaches the desired frozen consistency. This can vary from 15 to 30 minutes, although some recipes may require less time.  
NOTE: You can add in your favorite ingredients such as chocolate pieces, nuts or candy etc.

- through Chute as the mixture starts to freeze.
- Once ice cream has reached the desired consistency, turn off the power by pressing the ON/OFF switch OFF ("O"), then unplug the power cord.
  - To detach the electric motor, lid, and dasher assembly, turn it clockwise. Remove the dasher and use a spatula to scrape off any excess ice cream.
  - Transfer the ice cream to a freezer-safe container for storage, or serve it inside the freezer bowl.

#### **CLEANING AND MAINTENANCE INSTRUCTIONS**

- The ice cream maker must be turned off, unplugged, and completely cool before cleaning, handling, or storing.
- Remove the electric motor, lid, and dasher assembly by turning it clockwise, then lift from the freezer bowl. Pull the dasher out of the motor for cleaning. Press both white locking clips inwards to remove the motor from the lid.
- Wash the freezer bowl, lid and dasher in warm, soapy water. Rinse and dry thoroughly. Do not replace the lid with electric motor until the freezer bowl is completely dry.
- Wipe electric motor with a damp, soapy cloth, rinse the cloth and wipe the electric motor clean, then dry thoroughly. Never immerse the electric motor in water.
- To maintain optimal performance of your appliance, it is essential to clean the appliance thoroughly after each use.
- Never immerse the appliance, cord, or plug in water or any other liquids. The ice cream maker is not dishwasher safe.
- Do not put freezer bowl inside freezer while it's still wet.
- Never use abrasive cleaning products as this may damage the appliance.
- Do not use an abrasive sponge, cloth or scouring pad on the unit.
- Ensure the ice cream maker is completely dry before operation or storing.
- Store the unplugged, fully assembled ice cream maker in a safe, dry place, and out of reach from children.
- Any other servicing should be performed by an authorized service representative. If service is required, do not return to your store. The appliance has no user serviceable parts. If your appliance fails to work, contact our customer service department via email at [tasty@epoca.com](mailto:tasty@epoca.com).

#### **1-YEAR LIMITED WARRANTY**

##### **(U.S. Only)**

Congratulations on your purchase of Tasty® product. This product is warranted to be free from defects in material and workmanship under normal household use for a period of one (1) year from the date of original purchase. During this period, the manufacturer's obligation shall be limited to repairing or replacing, at its option, FOB Epoca International Distribution Facility or the authorized selling agent, any defective part of the product covered by the terms of the limited warranty.

This warranty shall not apply to glass parts, wear from normal use, use not in conformity with the printed directions, neglect including failure to clean product regularly in accordance with the manufacturer's instructions, use for commercial purposes or other than single-family household use, damages resulting from accidents, alteration, abuse or misuse, including damage caused by overheating, and does not apply to scratches, stains, discoloration or other damage, which does not impair the functionality of the product. This warranty extends only to the original consumer purchaser or gift recipient, and is valid only for the first quality goods purchased from an authorized selling agent of Epoca International, LLC. Keep the original sales receipt, as proof of purchase is required to make a warranty claim.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY OR CONDITION, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING, WITHOUT LIMITATION, ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. This warranty gives you specific legal rights, and you may also have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

To claim your warranty, send the product, proof of purchase, and an \$8.00 USD check for shipping and handling to: Epoca International, LLC, Attn.: Customer Service, 931 Clint Moore Rd., Boca Raton, FL 33487 or contact [tasty@epoca.com](mailto:tasty@epoca.com).

Tasty is a trademark of BuzzFeed Media Enterprises, Inc. Used under license  
©2024 BuzzFeed Media Enterprises, Inc.